


# Brockway Model 260XL

## TRACTOR CHART

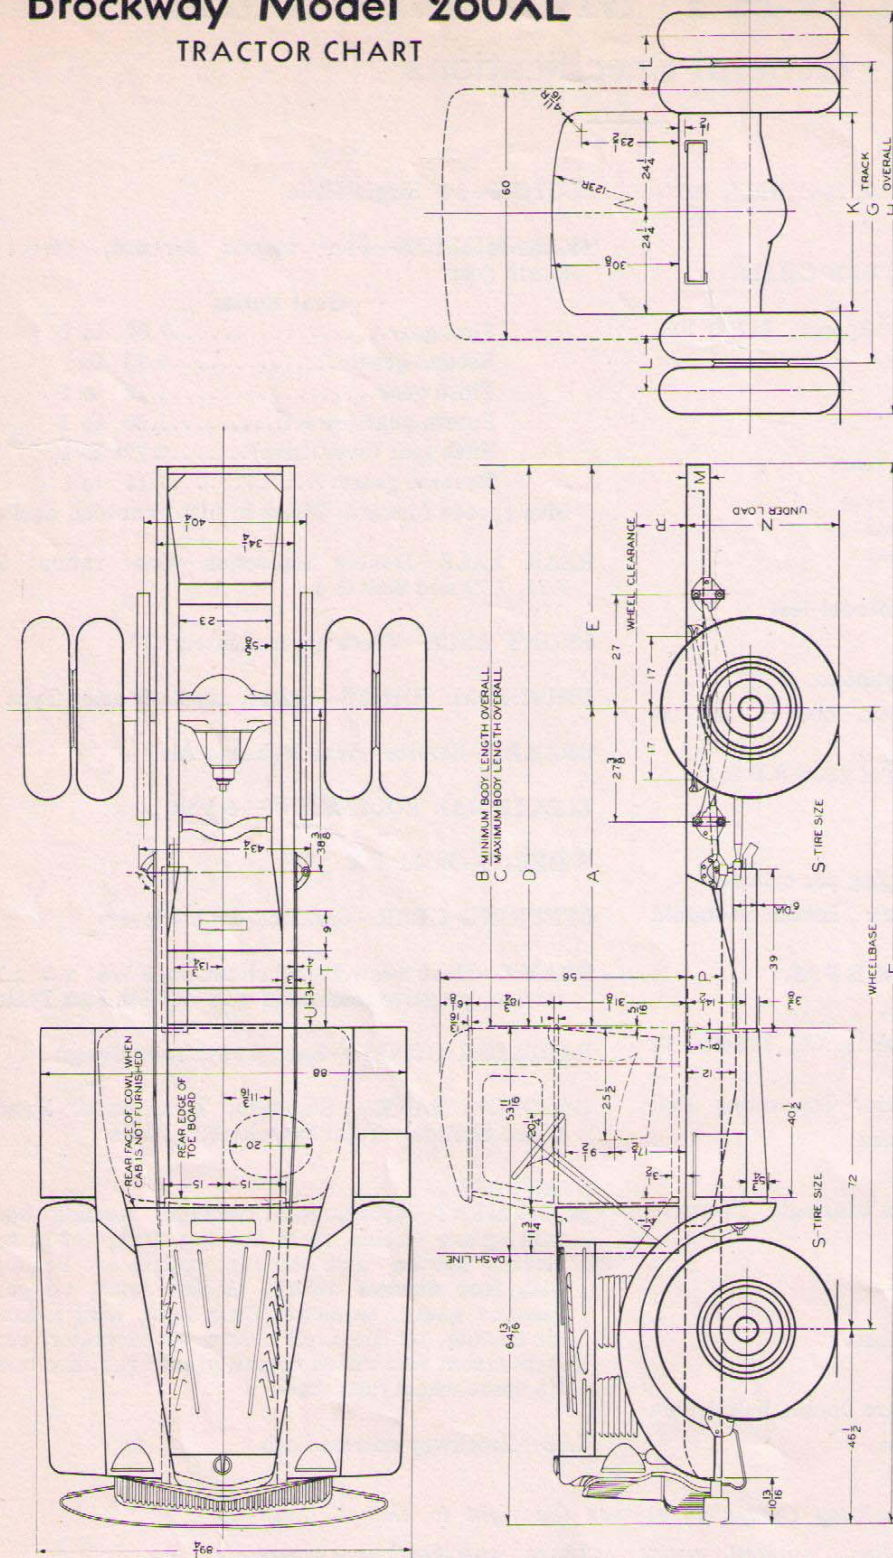

### MODEL 260XL

W.B.	A	B	C	D	E	F	M	P	Tire Size	G	H	K	L	N	R
141	69	9'-0"	9'-6"	114	45	232½	5¾	8¼	11.00-20	71	96	45¾	13¾	38¾	14
149	77	10'-0"	10'-6"	126	49	244½	5¾	8¼	11.00-22	71	96	45¾	13¾	39¾	15
167	95	12'-6"	13'-0"	156	61	274½	5¾	8¼	12.00-20	71	96½	45½	13¾	38½	13½
179	107	14'-6"	15'-0"	180	73	298½	5¾	8¼	12.00-24	71	96½	45½	13¾	40½	15½
185	113	15'-6"	16'-0"	192	79	310½	5¾	8¼							
191	119	16'-6"	17'-0"	204	85	322½	5¾	8¼							
197	125	17'-6"	18'-0"	216	91	334½	5¾	8¼							
209	137	19'-0"	19'-6"	234	97	352½	5¾	8¼							

**BROCKWAY MOTOR COMPANY, INC.**  
 GENERAL OFFICE AND FACTORY  
 CORTLAND, NEW YORK

